










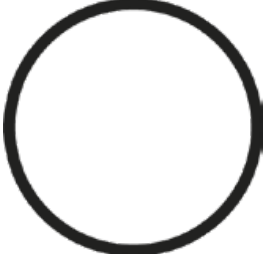











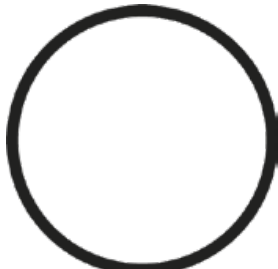











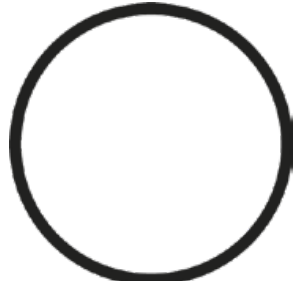

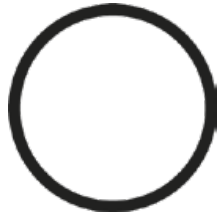

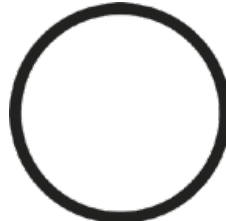

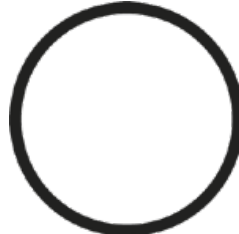

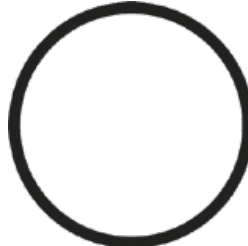

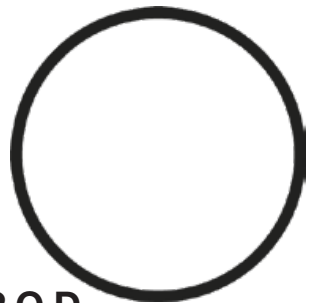


| | | | | | |
|--|---|---|---|--|---|
|  11186 01  1/8 I.D., 1/4 O.D. Industry No. 006 |  11186 02  5/32 I.D., 9/32 O.D. Industry No. 007 |  11186 03  3/16 I.D., 5/16 O.D. Industry No. 008 |  11186 04  7/32 I.D., 11/32 O.D. Industry No. 009 |  11186 05  1/4 I.D., 3/8 O.D. Industry No. 010 |  92867  1-3/16 I.D., 1-5/16 O.D. Industry No. 025 |
|  11186 06  5/16 I.D., 7/16 O.D. Industry No. 011 |  11186 07  3/8 I.D., 1/2 O.D. Industry No. 012 |  87018  7/16 I.D., 9/16 O.D. Industry No. 013 |  87019  1/2 I.D., 5/8 O.D. Industry No. 014 |  92866  9/16 I.D., 11/16 O.D. Industry No. 015 |  87029  1-1/4 I.D., 1-3/8 O.D. Industry No. 026 |
|  87020  5/8 I.D., 3/4 O.D. Industry No. 016 |  87021  11/16 I.D., 13/16 O.D. Industry No. 017 |  87022  3/4 I.D., 7/8 O.D. Industry No. 018 |  87023  13/16 I.D., 15/16 O.D. Industry No. 019 |  87024  7/8 I.D., 1 O.D. Industry No. 020 |  87030  1-5/16 I.D., 1-7/16 O.D. Industry No. 027 |
|  87025  15/16 I.D., 1-1/16 O.D. Industry No. 021 |  87026  1 I.D., 1-1/8 O.D. Industry No. 022 |  87027  1-1/16 I.D., 1-3/16 O.D. Industry No. 023 |  87028  1-1/8 I.D., 1-1/4 O.D. Industry No. 024 | |  87031  1-3/8 I.D., 1-1/2 O.D. Industry No. 028 |