




1. Drill hole 1/8" deeper than anchor length for flush mounting. Where surface deterioration is present, drill hole slightly deeper to permit anchor to be recessed.

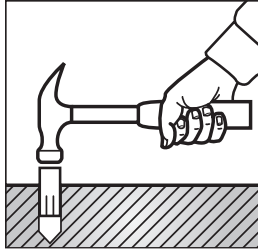

2. Drop anchor into hole. If hole is slightly undersized, tap anchor with hammer until it bottoms in hole.

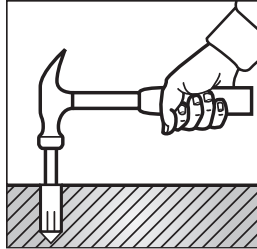

3. To set expander plug, installation tool can be struck a few sharp blows with a hammer, or an automatic air tool or electric tool can be used.

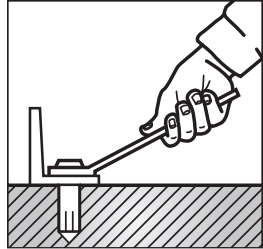

4. Place fixture in position, insert bolt and tighten.