


1. Using 1/4" carbide bit, drill hole at least 1/4" deeper than anchor embedment. Clean hole of debris.

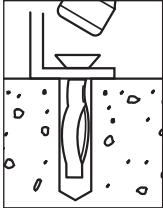

2. To set, drive anchor into hole through item to be fastened.